Symbologies setting

- Enable	- Disable
* UPC-A on	UPC-A off
* UPC-E on	UPC-E off
* EAN13 on	EAN13 off
* EAN8 on	EAN8 off
* Code39 on	Code39 off
*Codabar on	Codabar off
* Code93 on	Code93 off
* Code128 on	Code128 off
Interleaved 2of 5 on	* Interleaved 2of 5 off
Industrial 2 of 5 on	* Industrial 2 of 5 off
Matrix 2 of 5 on	* Matrix 2 of 5 off
MSI/Plessey on	* MSI/Plessey off
Code32 on (Italian Pharma Code)	*Code32 off (Italian Pharma Code)
Code11 on	*Code11 off
Telepen on	*Telepen off
GS1 DataBar Omnidirectional on	*GS1 DataBar Omnidirectional off
GS1 DataBar Limited on	*GS1 DataBar Limited off
GS1 DataBar Expanded on	*GS1 DataBar Expanded off

Factory standard default settings

Items	Default setting
Interface	USB
Language (Keyboard)	English
Reading mode	Good read off
Terminator	CR
RS232 baud rate Data bits Stop bits Parity	9600 8 bits 1 stop bit None
Code ID	Off
Accuracy	Read 1 time
Emulate external keyboard	Disable
Enable 1D symbologies	UPC-A , UPC-E EAN13, EAN8 Code39, Code93 Code128, Codabar

Language For Keyboard Interface

* US

Italian

Check version

"Il manuale di configurazione completa può essere scaricato dal sito www.atlantis-land.com"

Version: 3.0

Atlantis

BARCODE SCANNER
Quick Start Guide

How Do You Program Your Atlantis Scanner?

1. Scan Start Configuration

Start Configuration

2. Scan all necessary labels to configure the scanner for your application

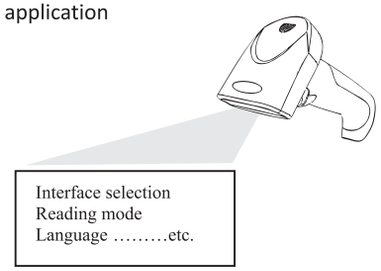

3. Scan End Configuration to save the changes.

End Configuration

Resetting The Standard Product Defaults

If you aren't sure what programming options are in your scanner, or you've changed some options and want the factory settings restored, scan the bar code below.

Standard Product Default Setting

Interface Selection

The scanner is designed to switch easily from interfaces. Remember to reset the interface before changing to PS/2 or RS232 or USB cable.

KEYBOARD

RS-232

* HID USB

USB-Com Port Emulation

Emulate External Keyboard

Scan the barcode below if you do not have an external keyboard. After scanning the Emulate External Keyboard bar code, you must power cycle your computer.

Enable

* Disable

Language For Keyboard Interface

Multi-Language Support

* US

Scanning Mode Selection

* Good Read Off

Trigger On/off

Flash

Flash/auto power on

Continuous/Trigger off

Continuous/auto power on

Terminator selection- Keyboard & USB

None

* CR

Tab

CR+LF

RS-232 communication setting

- Baud Rate

1200bps

2400bps

4800bps

*9600bps

19200bps

38400bps

- Data bit

7 bits

*8 bit

- Stop bit

* 1 stop bit

2 stop bit

- Parity

* None

Odd

Even

Mark

Space